


HOME DECORATORS

collection[®]

BF-24679 MSL SHALLOW CUBBIE DRAWER TALL-6"Hx5 1/8"W


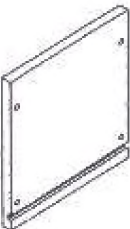
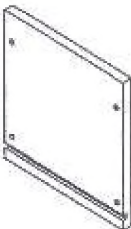




ASSEMBLY INSTRUCTIONS

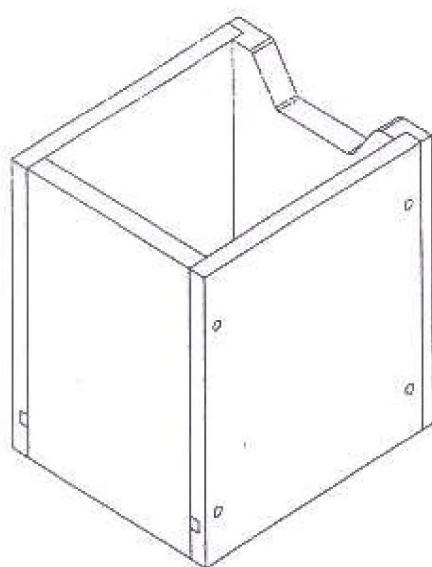Made In China




Thank you for purchasing this quality product.Be sure to check all packing material carefully for small parts,which may have came loose inside the carton during shipment. Count all parts and material hardware,Compare with parts list to be sure all part are present.If any parts are missing or damaged,phone,fax,or mail to our Customer Service Department.For efficient and speedy service please indicate the model number and code letter of part(s)need

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast,easy and correct assembly.


PARTS LIST		
<div>A</div> <div></div> <div>DRAWER PANEL FRONT-1PC</div>	<div>B</div> <div></div> <div>LEFT DRAWER SIDE PANEL-1PC</div>	<div>C</div> <div></div> <div>RIGHT DRAWER SIDE PANEL-1PC</div>
<div>D</div> <div></div> <div>DRAWER PANEL BACK-1PC</div>	<div>E</div> <div></div> <div>DRAWER BOTTOM PANEL-1PC</div>	<div>F</div> <div></div> <div>SCREWS-8PCS</div>
<div>G</div> <div></div> <div>FELT PAD-4PCS</div>		

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

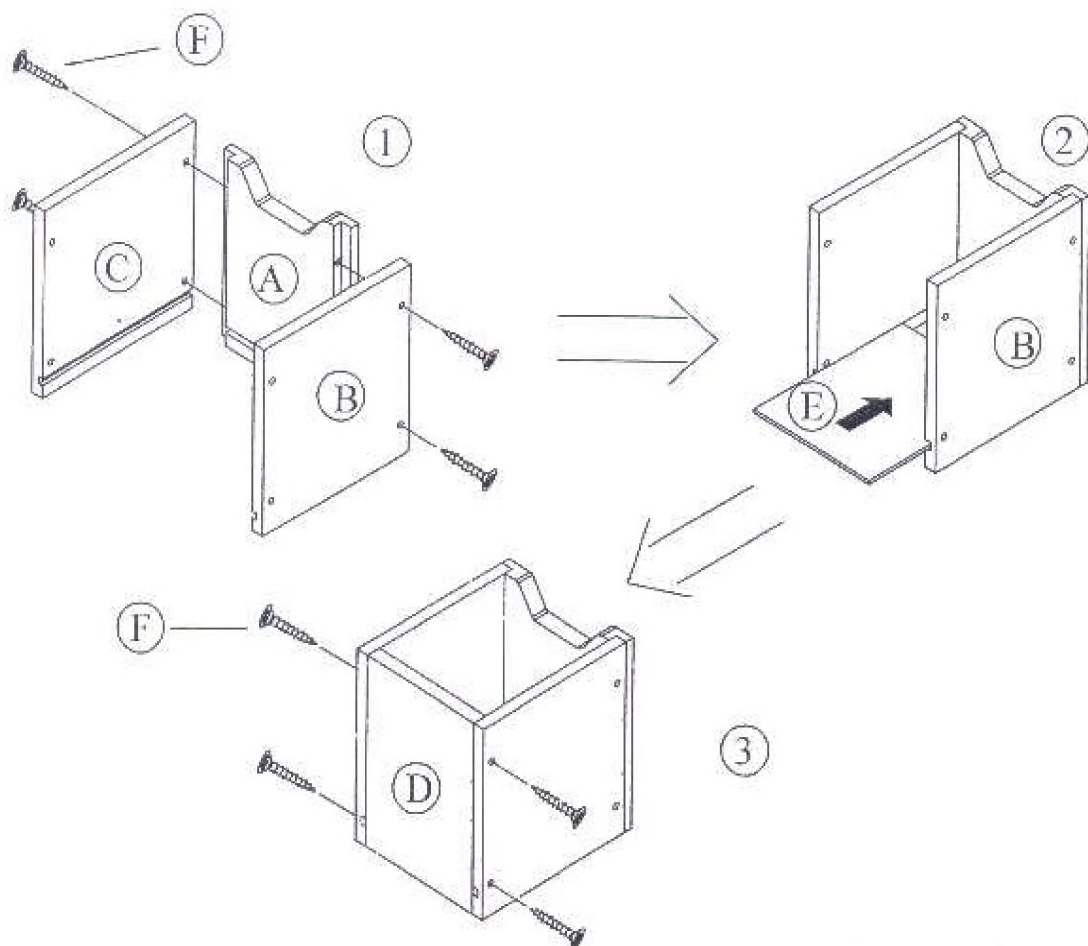

1). ASSEMBLE THE DRAWER

- ATTACH DRAWER PANEL SIDE(B/C) USING 4 SCREWS(F).
- INSERT THE DRAWER BOTTOM PANEL(E) INTO SLOTS IN DRAWER PANEL SIDE(B/C).
- ATTACH DRAWER PANEL BACK(D) TO BETWEEN SIDE DRAWER PANEL(B/C) USING 4 SCREWS(F).

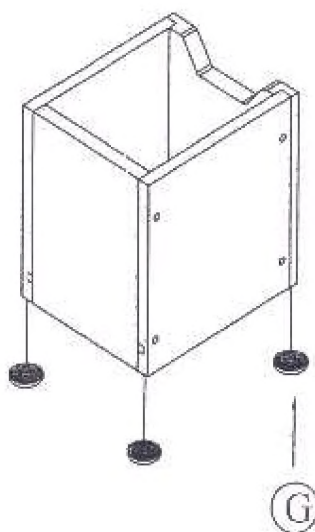

2). ASSEMBLE THE FELT PAD(G).

- ATTACH 4 FELT PAD(G) INTO THE DRAWER PANEL SIDE(B/C).